

No 24, Lane 365, Yang Goang Street, Nei Hu District, Taipei 114, Taiwan, R.O.C  
Tel: 886 - 2 - 8751 - 1111 Fax: 886 - 2 - 8751 - 1199

## Install OPOS Driver SOP.


1. Please execute IFD\_C1009004S1009004\_v103E.exe AP.




2. Please select “Next”.




3. Please select A “I accept...”, and then select B “Next”

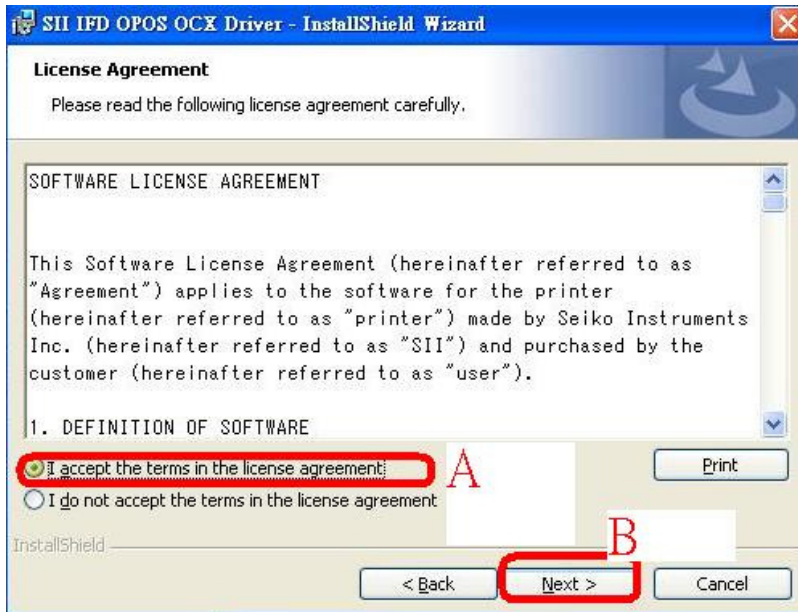

4. Please select “Next”

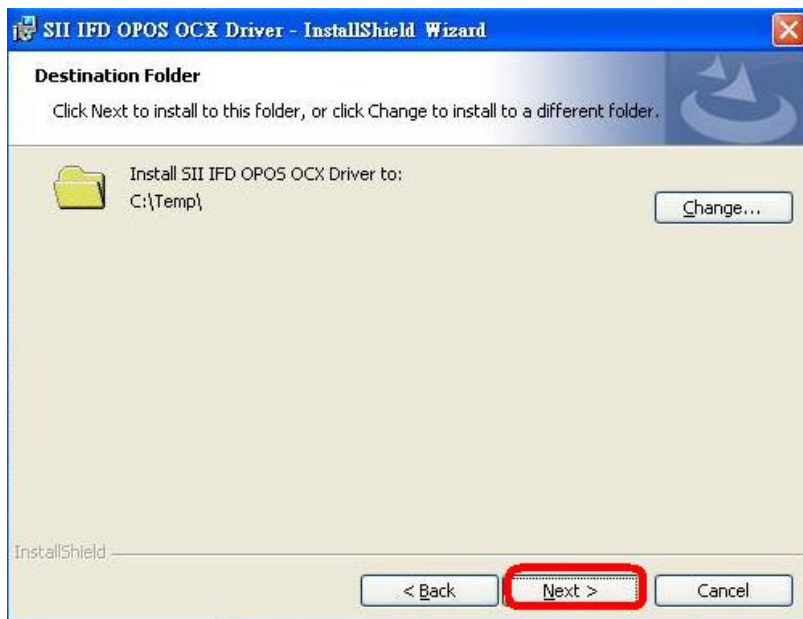


5. Please select “Install”

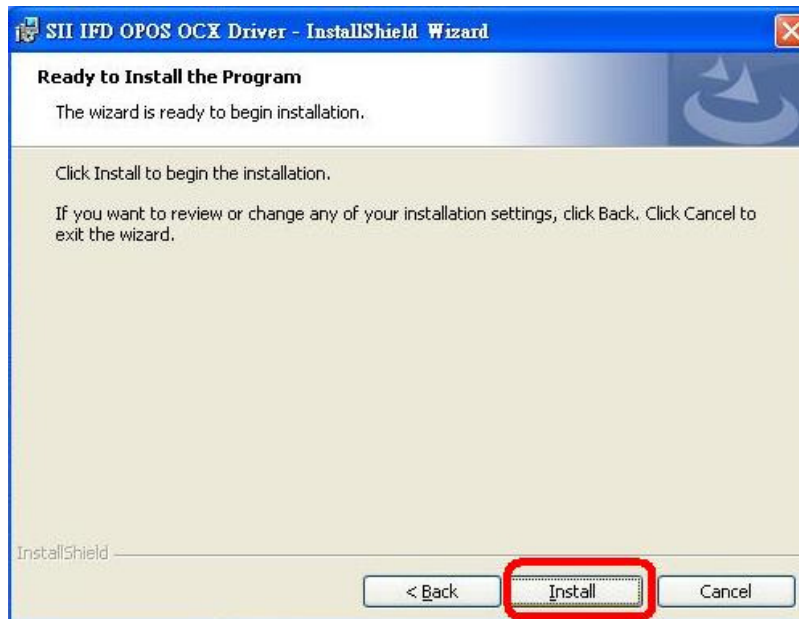

6.


Please select “Finish”

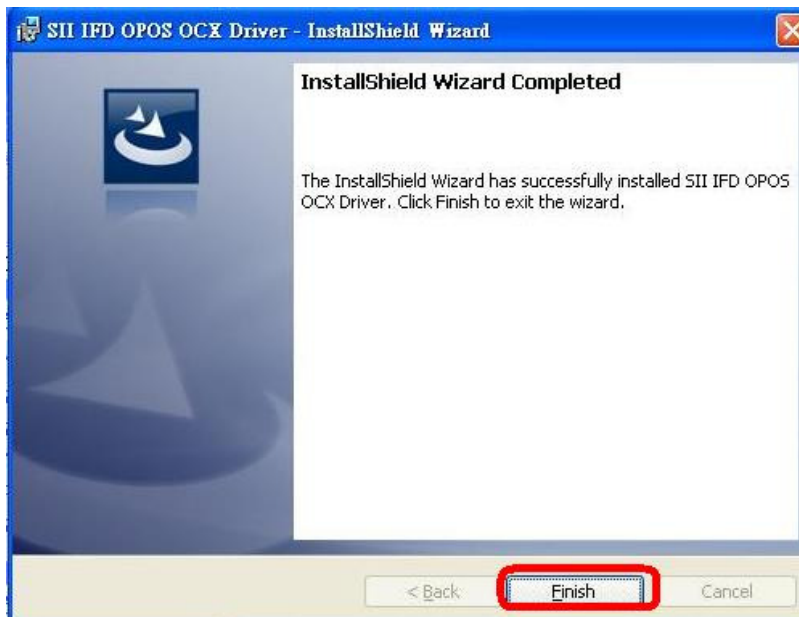

7. Please entry C:\Temp\Disk1 and then execute setup AP



Please select Next.

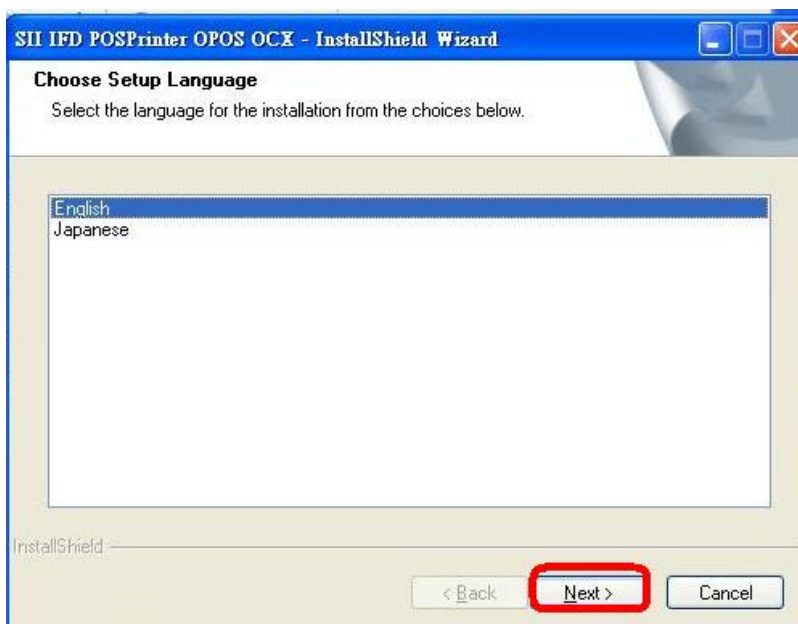




9.

Please select Next.




10.

Please select “Next”

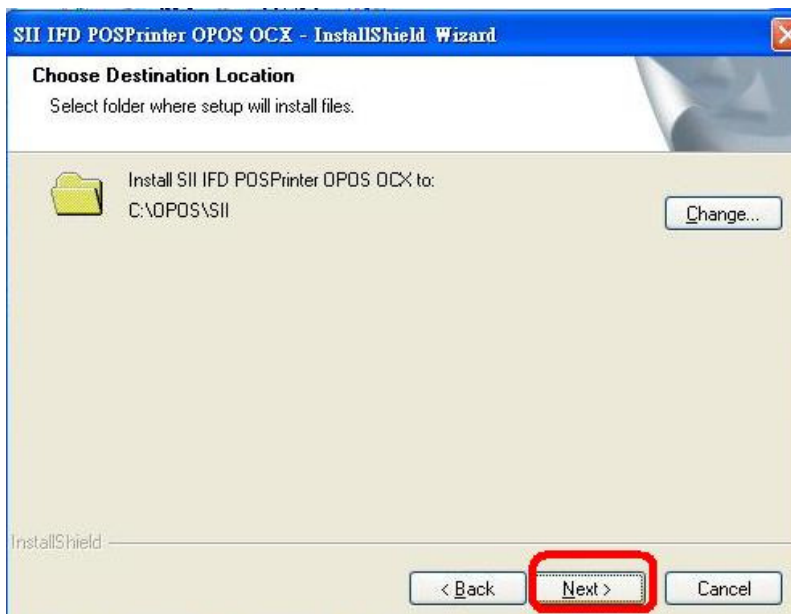

11.


Please select “Install”.

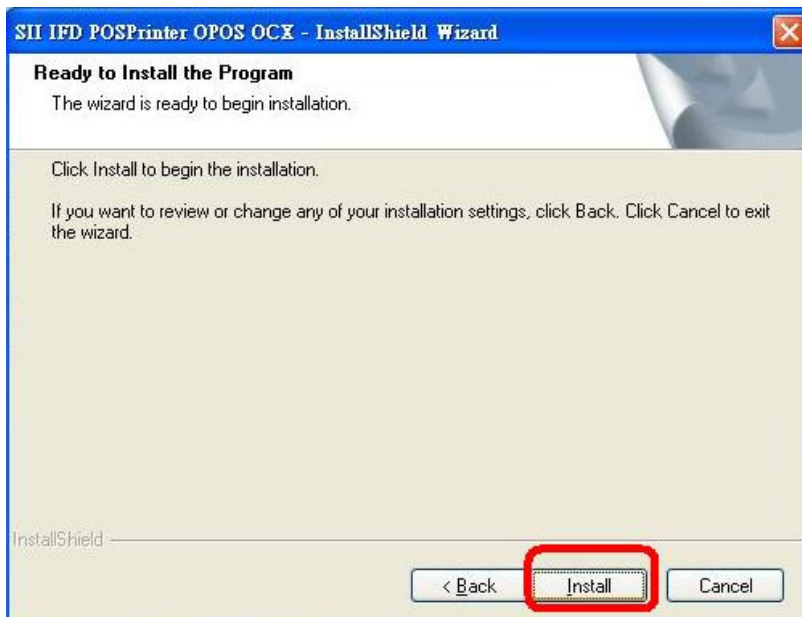


12. Please select “Yes”




13. Please select A “SII IFD00x(3inch)” and then select B “Add”.

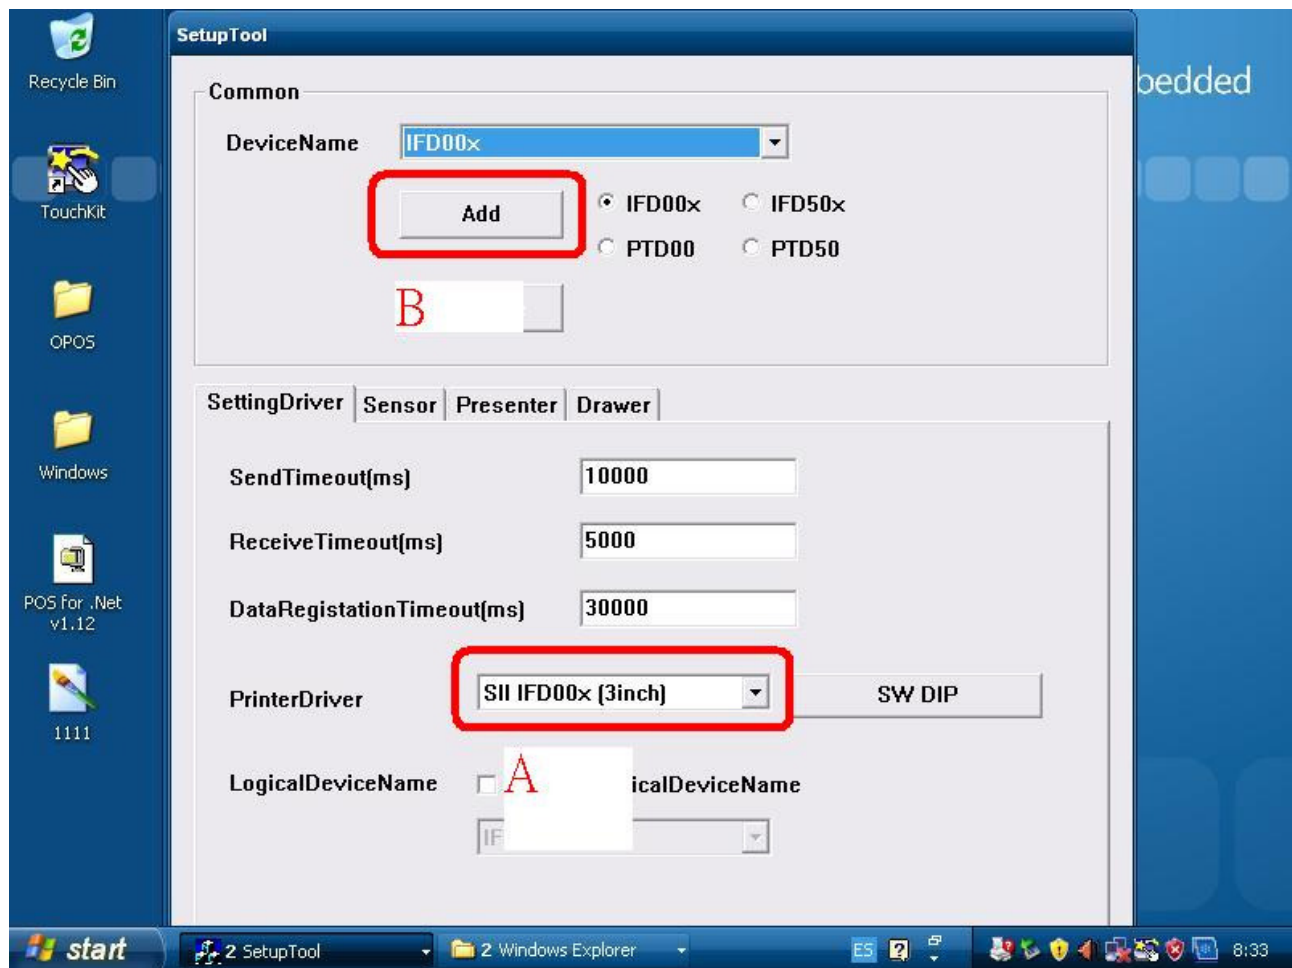

14. Please select “ok”

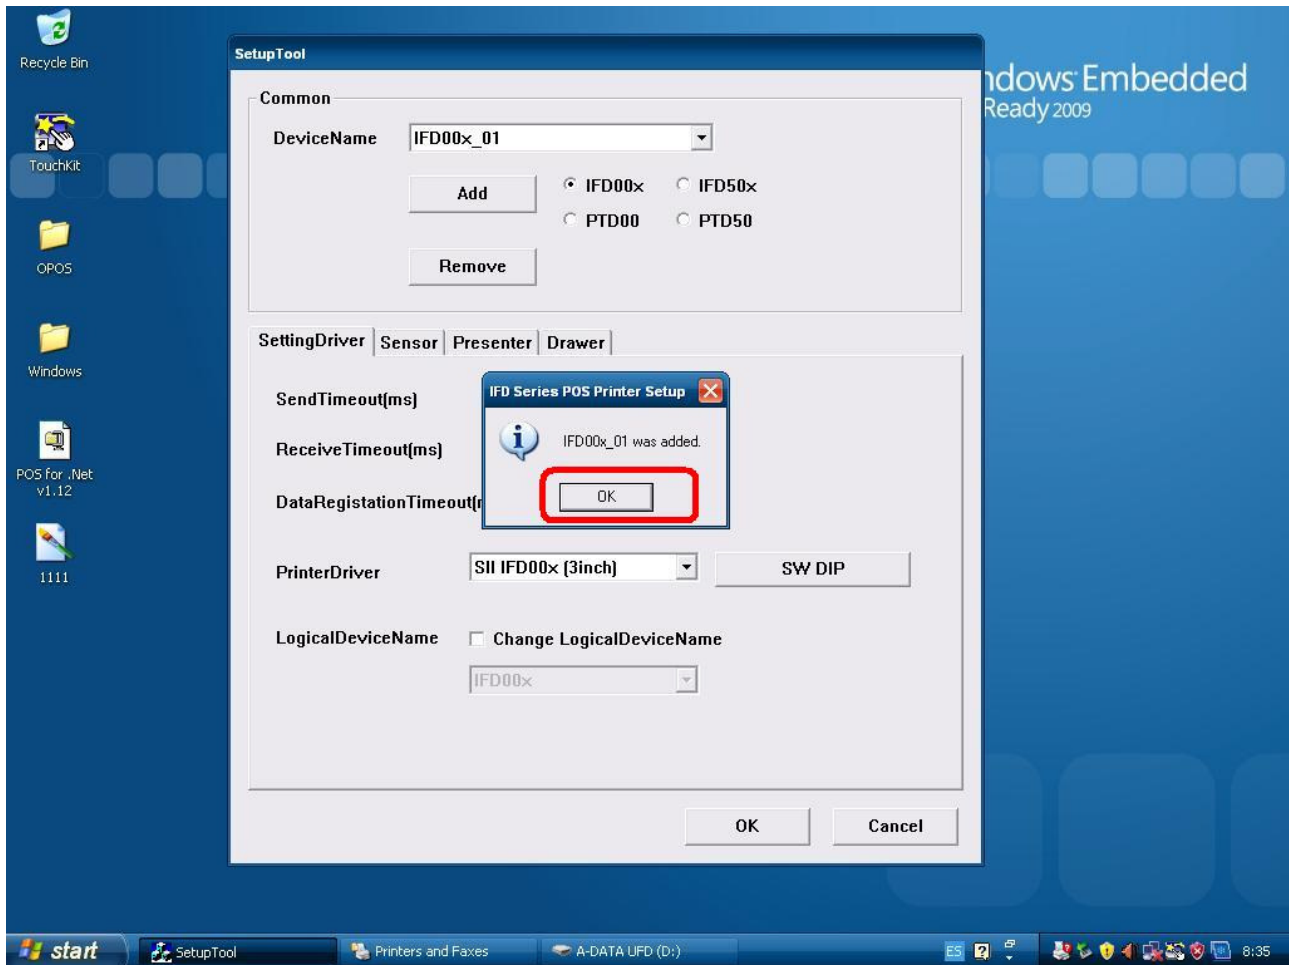

15. Please select “OK”

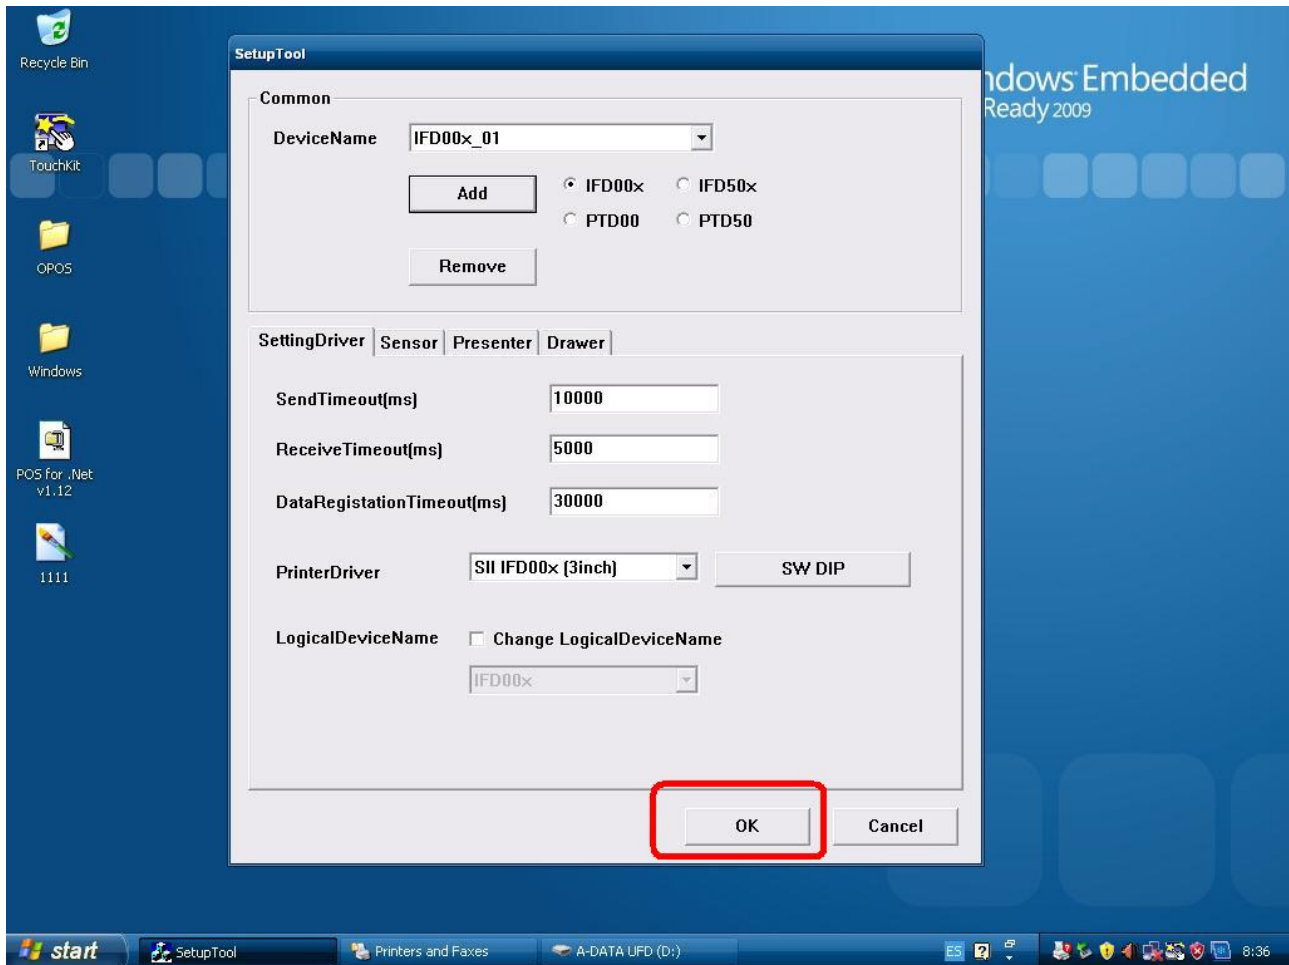

16. Please select “OK

